



**Installation Manual**  
**TWM Performance**  
**Shifter Cables Bushing Kit**  
**2002+ Acura RSX Type-S**  
**2006+ Honda Civic and Civic Si**

It is preferable to park on a flat surface, as you will have to engage and disengage the hand brake and shift from gears to neutral. If you can't do so and are obliged to install the short shifter on a slightly inclined surface, place wooden blocks in front or behind the wheels to prevent the car from moving while you're working.


**Estimated Installation Time:** 30 minutes

**Tools required:**

- 10 mm socket
- Ratchet
- 6" extension
- Needle nose pliers
- Punch
- Hammer
- Flat head screw driver



This manual is available for download in color at : [www.twmperformance.com](http://www.twmperformance.com)

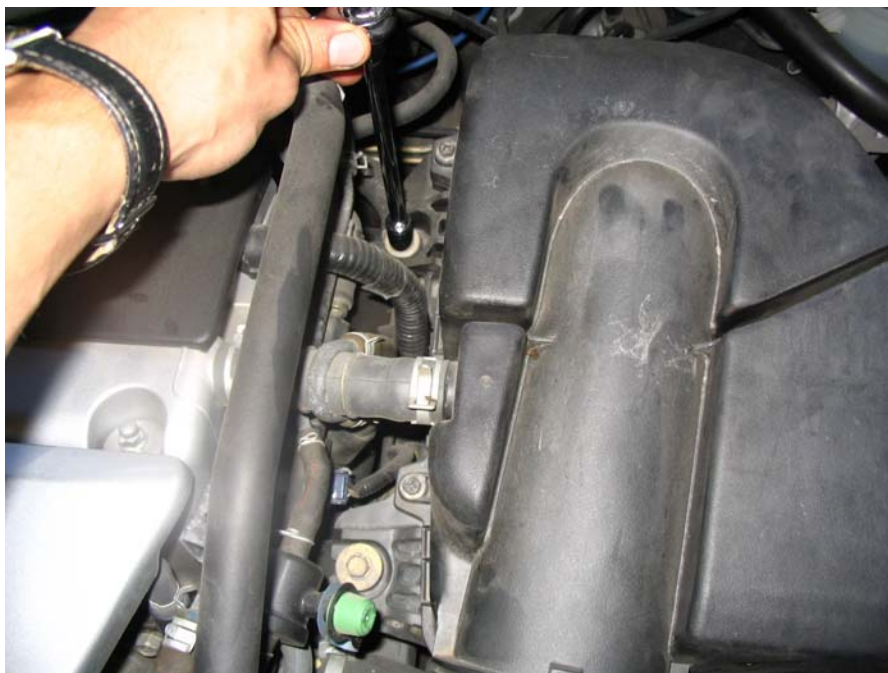


**1.** Working in the engine bay, locate the two bolts and the nut holding the air box and remove them using a 10 mm socket and a ratchet.



**2.** Remove the air box outlet from the top half by slacking the metal ring with a 10 mm socket and ratchet.



**3.** Remove the air box inlet from the bottom half and remove the air box from the engine bay. Put it in a safe place.

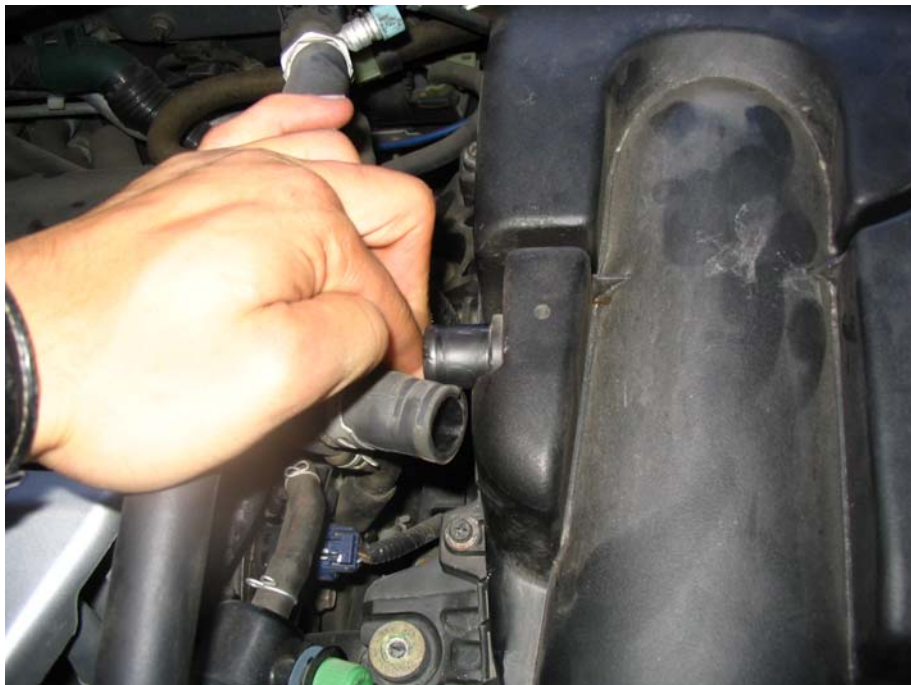

**4.** Using pliers, slide the clip a 1-2 inches away from the air box.



**5.** Locate the shifter cables and remove the cotter pin using pliers, a punch and a hammer.





6. Slide the cable off the pin and using pliers or your hands, remove the rubber bushing inside the cable.




7. Slide the appropriate bushing into the shifter cable, making sure the flange is against the transmission.





**8.** Slide the shifter cable over the bushing and secure it with one of the supplied e-clips.

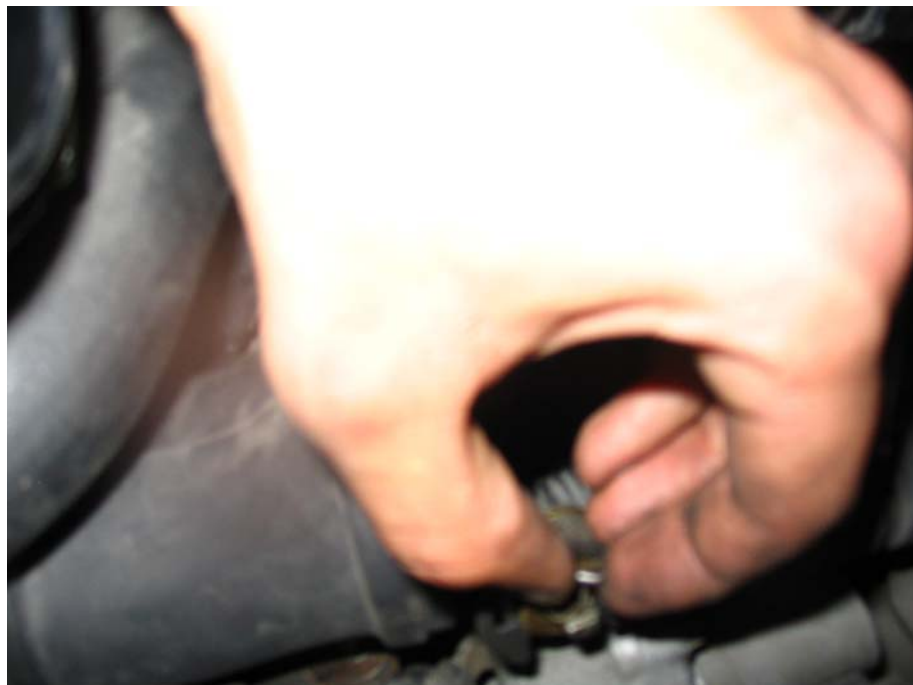

**9.** Insert the supplied cutter pin in the transmission pin hole and proceed to the other bushing.



**10. Re-install the air box by repeating steps 1 to 4 in the reverse order.**

**11. Enjoy the ride!**



#### **Legal Disclaimer**

TWM Performance is not responsible for the misuse, incorrect installation, or failure of any product we sell.

Under no circumstances, including but not limited to negligence, will TWM Performance be liable for special or consequential damages that result from the use or inability to use our products. TWM Performance does not assume responsibility for any damage to the user, passenger or vehicle resulting from the operation of a TWM Performance product.

**TO PROTECT USERS FROM INJURY OR DEATH. THE USER ASSUMES ALL RISKS.** Autocrossing, track events, and high speed driving are all dangerous activities - always drive responsibly and safely.

#### **Warranty**

Installation of some TWM Performance products may or may not void factory warranties. Always keep OEM equipment that has been replaced in case work is required at the dealer or the vehicle is sold.

This warranty covers the **original purchasing consumer**. This warranty is limited to repair or replacement by TWM Performance of any TWM Performance product that fails because of a defect in materials or workmanship.

Warranty does not cover the following:

- Damage incurred to related vehicle components
- Regular day to day wear on vehicle
- Shipping costs for replacements
- Installation costs and vehicle down time
- Products that have been modified, incorrectly installed or misused.
- Mounting hardware and bearings



This manual is available for download in color at : [www.twmperformance.com](http://www.twmperformance.com)